


## **Instructions on mounting the legs on Enderle hat toolbox**

The three legs A, B and C must all the same distance from the base of the toolbox to allow the toolbox to sit level when not on the Enderle injector.

First mount the front plate A in the centre of the front of the toolbox using the pop rivets supplied. Since leg B

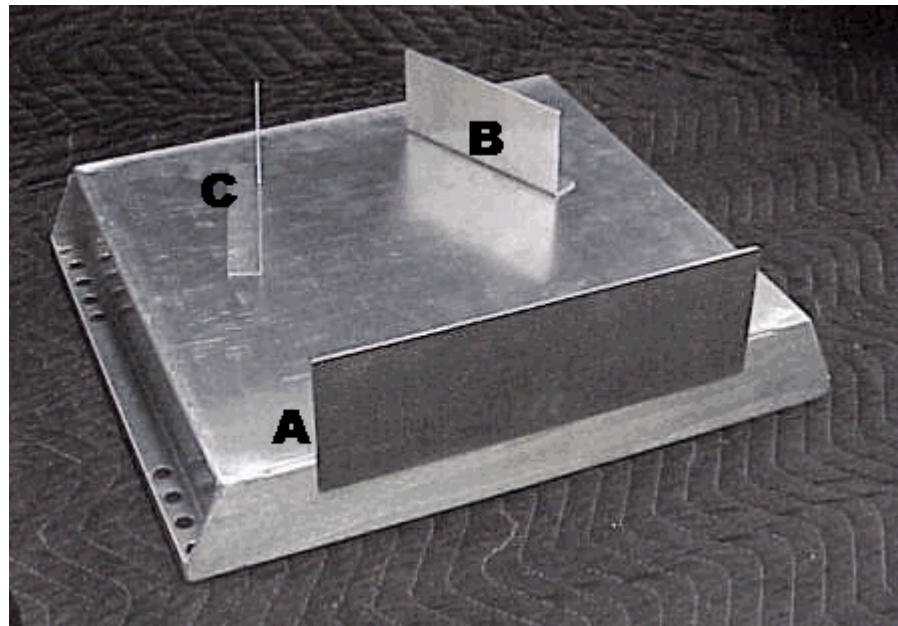

and C is 3" long then the front plate must project down 3" from the bottom of the tool box floor.

Once the front plate is mounted then sit the toolbox on the injector to locate leg B and C on the sides of the injector hat. Drill and attach with the pop rivets provided.